



ACCURACY SPEAKS, INC.

3960 N. USERY PASS RD. • MESA, AZ 85207 • (480)373-9499

AR-15 SHORT/LONG RANGE SCOPE MOUNT

1. Remove the rear clamp screw, and loosen the two front clamp screws.
2. Remove the bolt and charging handle.
3. Slide the scope mount onto the rifle from the rear.
4. Align one of the slots in the upper with the rear clamp screw hole.
5. Install the rear clamp screw.
6. Tighten the rear clamp screw and the two front clamp screws, do not over-torque.
7. If the rifle is to be used for shooting at six hundred yards and closer, use the "Flattop" setting on the scope mount.
8. If the rifle is to be used for longer than six hundred yards shooting, remove the two screws in the top of the scope mount and reverse the upper half of the scope mount to the "Long Range" setting, reinstall the two screws and tighten. This will provide approximately 20 minutes of additional elevation.
9. Install scope rings, check scope for contact with mount or handguard.
10. Set eye relieved and square crosshairs to rifle.
11. Tighten ring screws, boresight and go shootin'.